



x3

Batteries included
Requires 3 1.5V AG13/LR44 batteries



REPLACING BATTERIES

Tool required – small Phillips head screwdriver 

To replace batteries, open battery compartment cover with a Phillips head screwdriver. Insert 3 fresh 1.5V AG13/LR44 button cell batteries only. Make sure the “=” and “-” ends are inserted correctly, as indicated in the battery compartment. Replace the battery compartment cover. Do not over-tighten screw.



WARNING:
CHOKING HAZARD - Small parts.
Not for children under 3 years.

REPLACING BATTERIES

Tool required – small Phillips head screwdriver

To replace batteries, open battery compartment cover with a Phillips head screwdriver. Insert 3 fresh 1.5V AG13/LR44 button cell batteries only. Make sure the “=” and “-” ends are inserted correctly, as indicated in the battery compartment. Replace the battery compartment cover. Do not over-tighten screw.

OPERATION

Note: If your pet is moving slowly or the eyes do not illuminate -
Replace the batteries.

- 1) To turn on your pet tarantula, slide the power switch to “ON.” Your tarantulas creepy red eyes will light up to signal that it is on and its wheels may immediately spin.
- 2) For best creepy crawlin’ tarantula movement, run on hard, flat, smooth surfaces.
- 3) Your pet tarantula is sound activated and will crawl when you clap your hands, speak to it or pick it up or place it down.

IMPORTANT: To preserve battery life, make sure you always switch the power switch to “OFF” when not playing with your pet tarantula or storing him in his Creepy Crate.

