



5+  
2077

# MOONLIGHT MUSHROOM™


Magical Colored Light Projector

**AAA/LR03 x3** Batteries not included  
Requires 3 x 1.5V AAA/LR03 batteries

## Installing batteries into Moonlight Mushroom

Tool required - Small Phillips head screwdriver


1. Use a Phillips head screwdriver to remove the battery cover.
2. Insert 3 "AAA" batteries. Make sure the "+" and "-" ends are inserted correctly, as indicated in the battery compartment.
3. Replace cover.

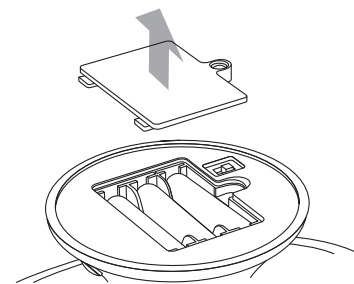

## Using Moonlight Mushroom

**IMPORTANT:** Before operating, be sure on/off switch located on the back of Moonlight Mushroom is turned to the "ON" position.

**NOTE:** Carefully lower dome onto the Moonlight Mushroom base and snap into position. The dome should sit firmly on top of base.

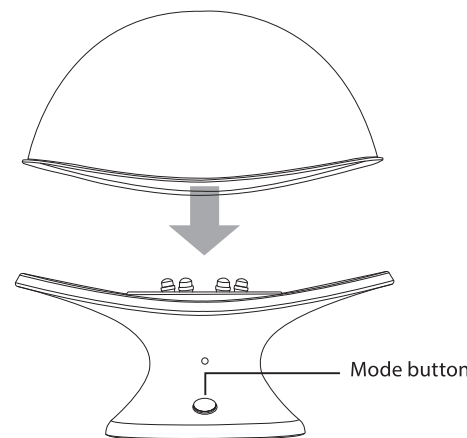

## Color Mode

To manually cycle through the 8 color modes, press the mode button. If you leave the mushroom on a mode, it will automatically turn off after 15 minutes.

MODE	INITIAL LED ON	LIGHT EFFECT
1	Red	Spectrum Fast
2	Orange	Spectrum Slow
3	Green	Random Fast
4	Blue	Random Slow
5	Red/Orange	Red Orange Yellow
6	Green/Blue	Green Blue Purple
7	Red/Blue	Red Blue Purple
8	All	Rainbow

The Moonlight Mushroom will remember the mode last used.

## KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE — DO NOT DISCARD

Questions? Visit us at [unclemilton.com](http://unclemilton.com)

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

In an environment with electrostatic discharge, the product may malfunction. In this case, remove the batteries and wait for 5 minutes and then replace the batteries.

## BATTERY SAFETY INFORMATION

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not dispose of batteries in fire. Battery may explode or leak.



This product and its batteries must be disposed of separately at your local waste recycling centre. Do not dispose them in your household waste bin.



MANUFACTURED BY UNCLE MILTON INDUSTRIES, INC.  
P.O. Box 6281, THOUSAND OAKS, CA 91359 USA  
©2014 UMI. All rights reserved. ® and TM designate trademarks of Uncle Milton Industries, Inc.  
MADE IN CHINA

2077-0250-0414-v03