



Batteries included Requires 2 AG13/LR44 batteries


## Includes:

- 5 dinosaur skull parts
- 1 display stand
- 1 sticker for display stand

## **Battery replacement**

Tool required - Small Phillips head screwdriver.

- Using a Phillips head screwdriver, loosen the screw in the battery cover and remove the battery cover.
- Insert 2 AG13/LR44 batteries as indicated in the battery compartment.
- 3. Replace battery cover and tighten screw.

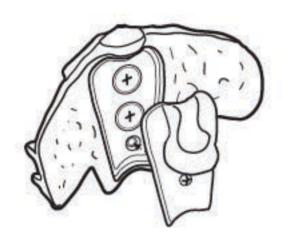

## BATTERY SAFETY INFORMATION

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
   The supply terminals are not to be short-directed.
- Do not mix old and new batteries.

- Do not mixalkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not dispose of batteries in fire.
   Battery may explode or leak.

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE — DO NOT DISCARD

Questions? Visit unclemitton.com



6+

2087

MANUFACTURED BY UNCLE MILTON INDUSTRIES, INC.
P.O. Box 6281
THOUSAND OAKS, CA 91359 USA
©2013 UMI. All rights reserved. and TM designate
trademarks of Uncle Milton Industries, Inc.
MADE IN CHINA

2087-0250-1112-V04

