


# SNOWFLAKE LIGHT DANCE

AA/LR6 x3 Batteries not included  
Requires 3 x 1.5V AA/LR6 batteries

Magical Light Show with Wall Decals


## Installing Batteries into Room Light

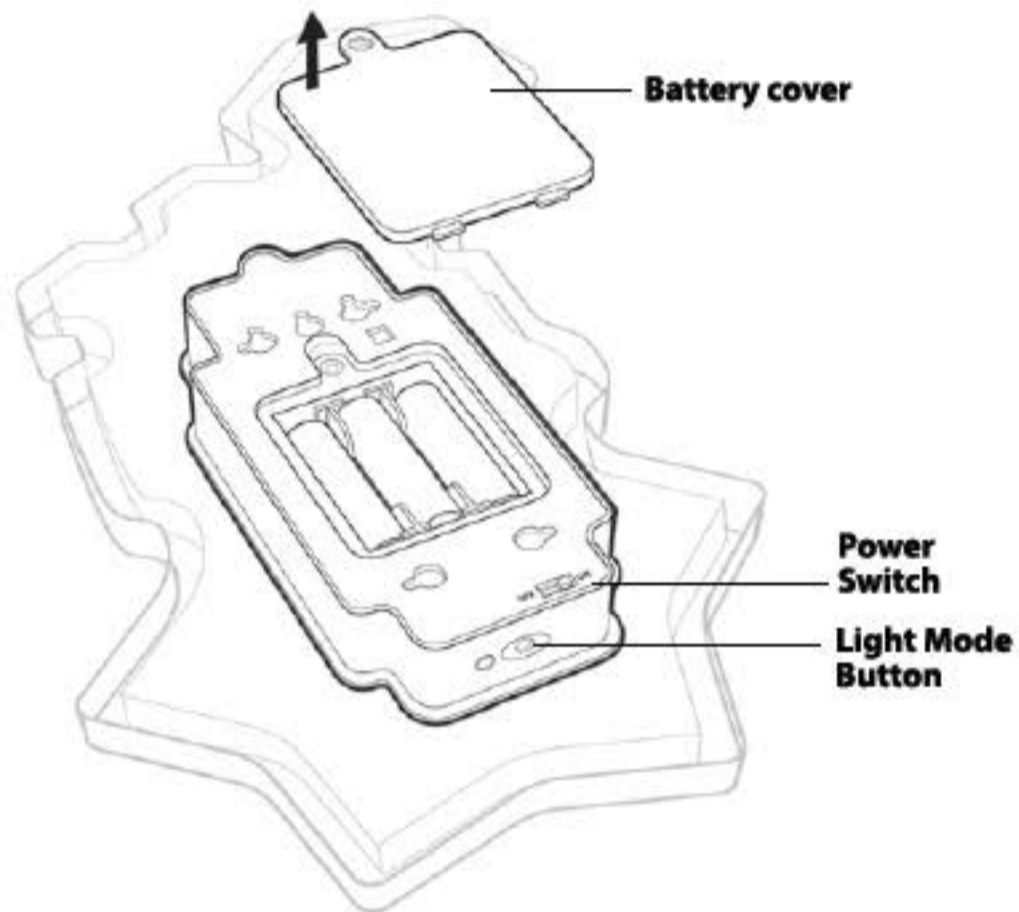

Tool required - Small Phillips head screwdriver

1. Use a Phillips head screwdriver to remove the battery cover.
2. Insert 3 AA/LR6 batteries. Make sure the "+" and "-" ends are inserted correctly, as indicated in the battery compartment. Replace cover.

## Installing Snowflake Light Dance on Your Wall

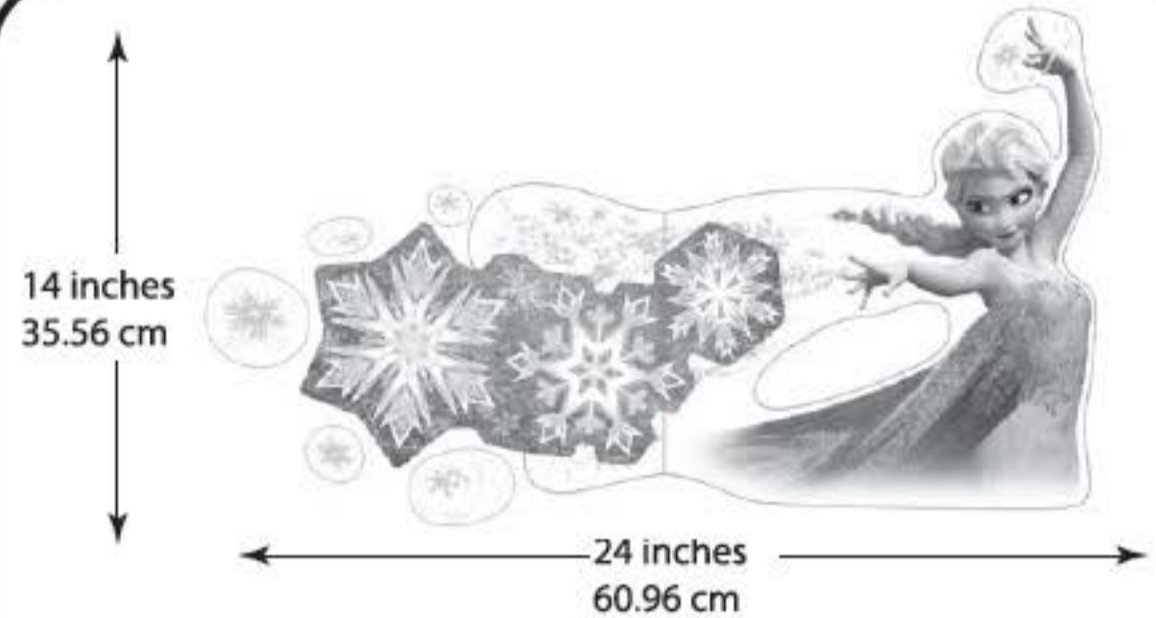

- 1 Before installing the Snowflake Light, move the Power Switch on the back to the "ON" position.

Consider the overall size of the product shown to determine the appropriate location and height to hang the Snowflake Light. Remember to hang at a height that will allow easy access and reach to the Light Mode button.

### 2 Wall Decal Preparation **DO NOT SKIP THIS STEP**

After removing the decals from the package, roll out the sheet and lay flat for 24 - 48 hours until the sheet no longer wants to curl back up.

*For best results apply the decals onto smooth, clean surfaces. The decals may not stick to heavily textured surfaces. Do not apply to fresh paint or wallpaper. Let the new paint/wallpaper dry for at least 3 weeks. Before applying the decals to wallpaper or other delicate surfaces, test one in an inconspicuous area. Keep the decals away from cribs and out of reach of young children to prevent choking hazard.*

#### PLEASE NOTE:

When applying each decal, carefully peel it from the sheet. Then, place and smooth the decal onto your wall in the desired location. To remove or reposition each decal, just carefully peel it from the wall.

*Continued on back*

**KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE —  
DO NOT DISCARD**  
Questions? Visit [uncdemilton.com](http://uncdemilton.com)

**Uncle  
Milton®**

MANUFACTURED BY UNCLE MILTON INDUSTRIES, INC.  
P.O. Box 6281, THOUSAND OAKS, CA 91359 USA  
©2014 UMI. All rights reserved. ® and TM designate trademarks  
of Uncle Milton Industries, Inc.  
MADE IN CHINA

© Disney  
Visit [www.Disney.com/Frozen](http://www.Disney.com/Frozen)

**WARNING:**  
**CHOKING HAZARD - Small parts.**  
**Not for children under 3 years.**  
**Adult assembly required.**




**3** Apply the Elsa decal as shown.


**Important:**  
Make sure this edge is vertical.




**4** Apply decals A and B as shown.

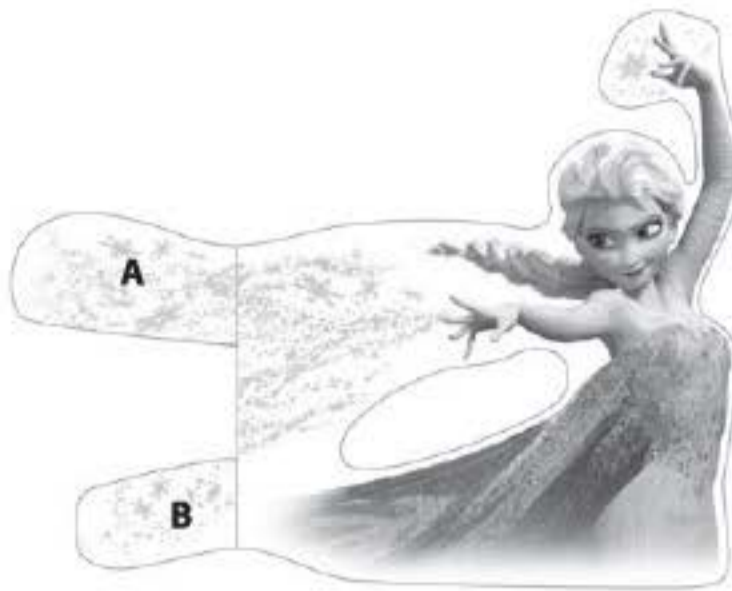


**5** Use the included HANGING TEMPLATE (on a separate sheet). Position the template on the wall and make two small holes in the wall to locate screw locations.

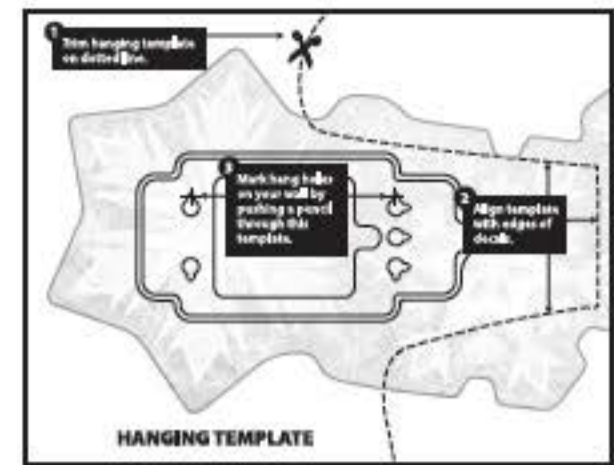

**6** Use included mounting hardware to hang the Snowflake Light unit on the wall.

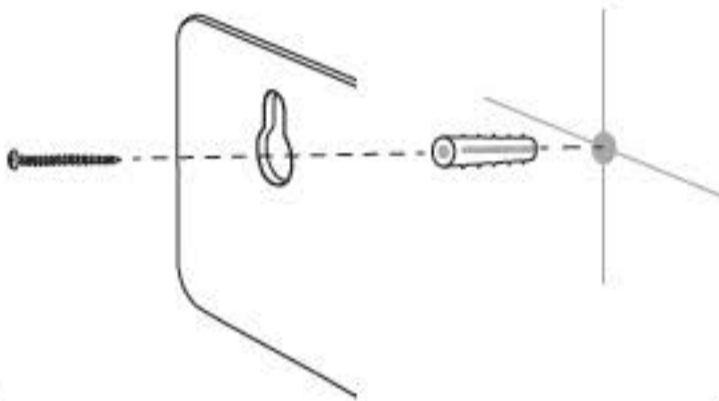

**7** Continue adding smaller snowflake decals as shown.

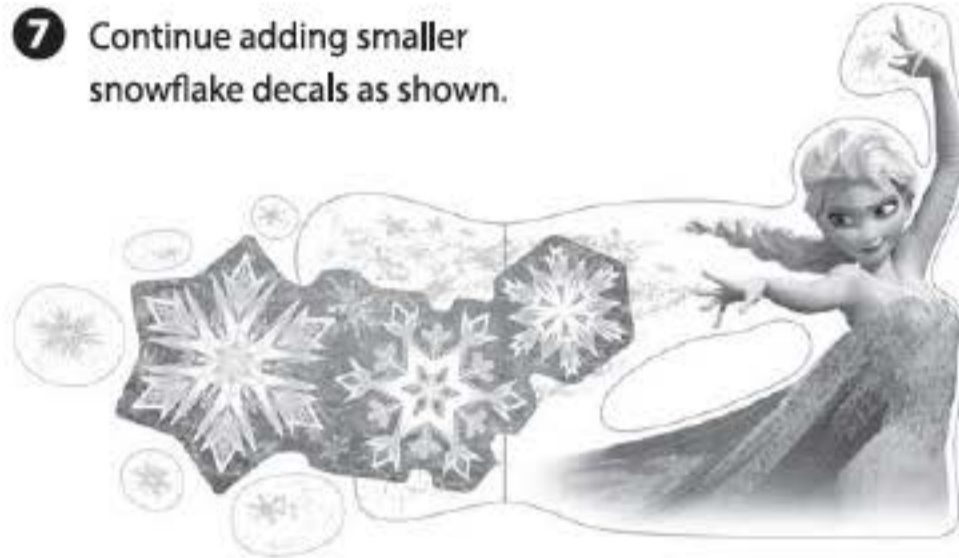

**8** On textured walls, periodically check the decals to make sure they remain flat against the surface. Gently smooth any parts of the decal that appear to be lifting off the surface. Repeat as needed until the decals remain flat against the surface.

## Light Activation and Light Mode Selection

Press the Light Mode button to activate your Snowflake Light. Press again to advance to the next light mode. To turn light off, cycle through the remaining modes or press and hold the Light Mode button.

The Snowflake Light will also automatically shut-off after approximately 15 minutes.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

**Caution:** changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### BATTERY SAFETY INFORMATION

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not dispose of batteries in fire. Battery may explode or leak.



This product and its batteries must be disposed of separately at your local waste recycling centre. Do not dispose them in your household waste bin.



**1** Trim hanging template on dotted line.



**3** Mark hang holes on your wall by pushing a pencil through this template.

**2** Align template with edges of decals.

# HANGING TEMPLATE

