




RAINBOW IN MY ROOM

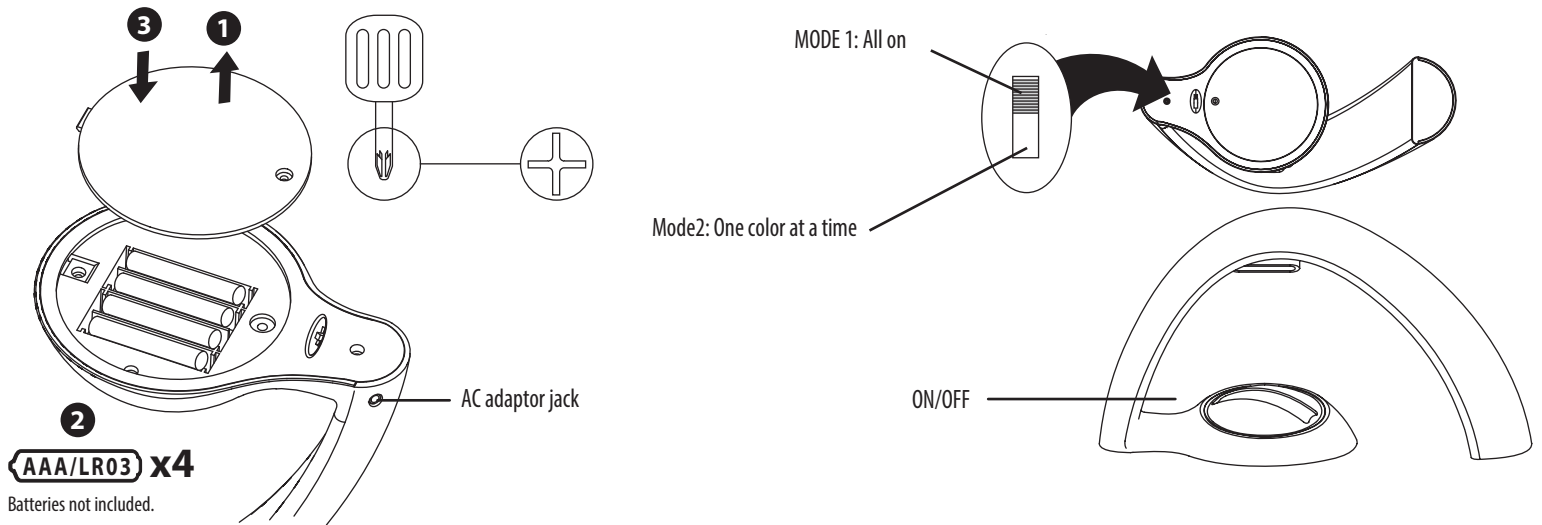

Using an optional AC adapter

US + Canada: 110 to 120 Volts AC, 60 Hz. Output 6 Volts DC, 450 mA

Europe + Australia: 220 to 240 Volts AC, 50 Hz. Output 6 Volts DC, 450 mA

This adaptor is available at many home electronics retail stores. Please follow manufacturer's instructions for compatibility and use.

If left on, the rainbow will turn off automatically after 10 minutes. If you are using an AC adapter, the unit will remain on until the ON/OFF button is pressed.

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE — DO NOT DISCARD Questions? Visit unclemilton.com

BATTERY SAFETY INFORMATION

- Only adults should install and replace batteries.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not dispose of batteries in fire. Battery may explode or leak.
- Batteries should be recycled or disposed of as per state and local guidelines.

In an environment with electrostatic discharge, the product may malfunction. In this case, remove the batteries and wait for 5 minutes and then replace the batteries.

- The toy is not intended for children under 3 years old
- The toy shall be used with a transformer for toys.
- The transformer is not a toy
- Toys liable to be cleaned with liquid are to be disconnected from the transformer before cleaning
- Toy is not to be connected more than recommended number of power supplied
- Transformers used with the toy are to be regularly examined for damage to the cord, plug, enclosure and other parts, and that, in the event of such damage, the toys must not be used with this transformer until the damage has been repaired.

The normal function of the product may be disturbed by Strong Electro Magnetic Interference. If so, simply reset the product to resume normal operation by following the instruction manual. In case the function could not resume, please use the product in other location.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



© 2017 TBDUM. All rights reserved.
® and ™ designate U.S. trademarks of Uncle Milton
P.O. Box 6281 Thousand Oaks, CA 91359 USA.
Printed in China. Product and colors may vary.