



# FIREWORKS LIGHT SHOW In My Room

Incredible Fireworks Lightshow Launcher

 
**CAUTION:** Do not look directly into the light source.

## BATTERY INSTALLATION

Tool required - Small Phillips head screwdriver

- Using a Phillips head screwdriver, remove the battery cover as shown.
- Insert 3 "AA" batteries as indicated in the battery compartment and replace cover.

**AA/LR6** x3 Batteries not included  
Requires 3 x 1.5V AA/LR6 batteries

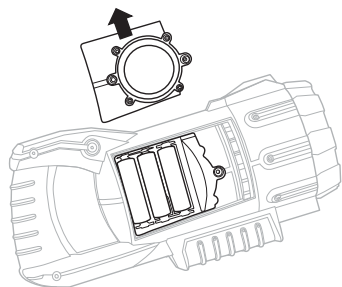

### BATTERY SAFETY INFORMATION

 
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not dispose of batteries in fire. Battery may explode or leak.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**IMPORTANT:** For best firework projection, use in a completely darkened room and project onto a white wall or ceiling from a distance of 4 to 5 feet.


- Slide power switch to ON position. Rotate firework selector to set firework image.

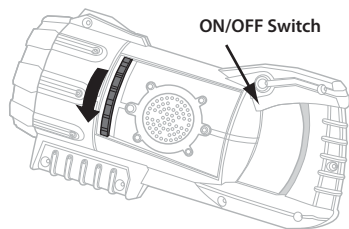

 - Pull back and release lower grip to shoot firework, and wait to hear launch sound effect.

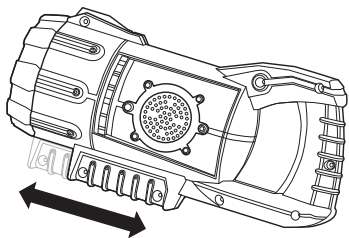

 - After launch sound effect, pull trigger to make the firework burst.

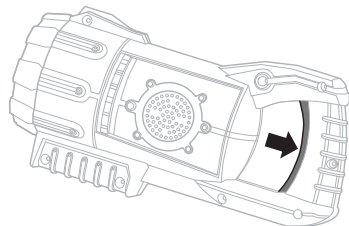

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE — DO NOT DISCARD

MANUFACTURED BY UNCLE MILTON  
INDUSTRIES, INC.  
P.O. Box 6281  
THOUSAND OAKS, CA 91359 USA  
©2012 UMI. All rights reserved. ® and ™ designate  
trademarks of Uncle Milton Industries, Inc.  
MADE IN CHINA

Questions? Visit [unclemilton.com](http://unclemilton.com)