



AAA/LR03 x2 Batteries not included
Requires 2 x 1.5V AAA/LR03 batteries

ROMAN CANDLE FIREBALL BLASTER™


Replacing Batteries

Tool required - Small Phillips head screwdriver.



- Using a Phillips head screwdriver, loosen the screw in the battery cover and remove the cover.
- Install two fresh AAA/LR03 batteries as indicated in the battery compartment.
- Replace battery cover and tighten screw.

Parts included:

- 1 Blaster
- 3 Light-up Fireballs

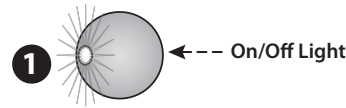

 To turn on the Fireball light, firmly press the ball on the opposite side of where the light is. Remember to press again to turn off when not in use to conserve battery life.

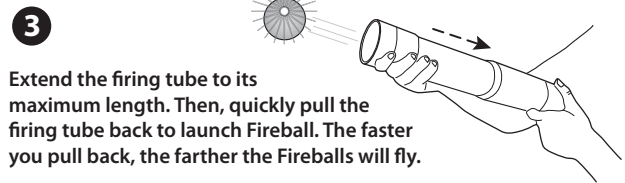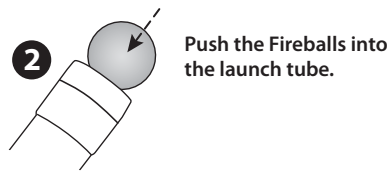

Extend the firing tube to its maximum length. Then, quickly pull the firing tube back to launch Fireball. The faster you pull back, the farther the Fireballs will fly.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

BATTERY SAFETY INFORMATION

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not dispose of batteries in fire. Battery may explode or leak.



Do not aim at eyes or face.
Do not shoot at people or animals.
TO AVOID INJURY: Use only Roman Candle Fireballs designed for this product.
Do not modify Fireballs or the Launcher.

To protect the environment adults should carefully open the fireball housing using a tool to remove the batteries. Dispose of the batteries in a recycle bin, or contact your local authority for recycling advice and facilities.

Roman Candle Fireballs have non-replaceable batteries. Do not dispose of Fireballs in fire, batteries inside this product may explode or leak.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE — DO NOT DISCARD

Questions? Visit unclemilton.com

MANUFACTURED BY UNCLE MILTON INDUSTRIES, INC.
P.O. Box 6281
THOUSAND OAKS, CA 91359 USA

©2012 UMI. All rights reserved. ® and TM designate trademarks of Uncle Milton Industries, Inc.
MADE IN CHINA



WARNING:
CHOKING HAZARD - Toy contains small balls.
Not for children under 3 years.