



5+  
2369

# SNOWBALL LIGHT PROJECTOR

**AAA/LR03 x3** Batteries not included  
Requires 3 x 1.5V AAA/LR03 batteries

## Installing batteries into Snowball Light Projector

Tool required - Small Phillips head screwdriver

1. Use a Phillips head screwdriver to remove the battery cover.
2. Insert 3 "AAA" batteries. Make sure the "+" and "-" ends are inserted correctly, as indicated in the battery compartment.
3. Replace cover.


## Using Snowball Light Projector

**IMPORTANT:** Before operating, be sure on/off switch located on the back of Snowball Light Projector is turned to the "ON" position. The Snowball Light Projector will shut off when the button is pressed 1.5 seconds in any mode.

**NOTE:** Carefully lower dome onto the Snowball Light Projector base and snap into position. The dome should sit firmly on top of base.

## Color Mode

There are 7 different light modes. Each time you press the mode button it will advance to the next light mode. If you leave the Snowball on a mode, it will automatically turn off after 20 minutes.

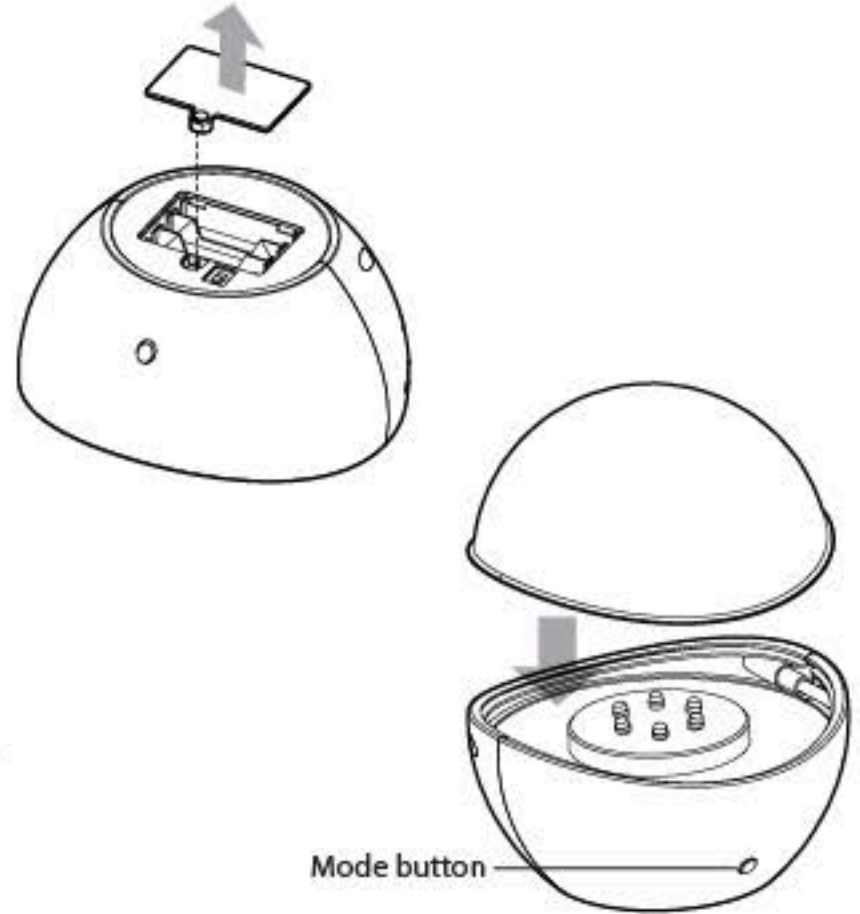

## KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE — DO NOT DISCARD Questions? Visit us at [unclemilton.com](http://unclemilton.com)

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

In an environment with electrostatic discharge, the product may malfunction. In this case, remove the batteries and wait for 5 minutes and then replace the batteries.

MODE	INITIAL LED ON	LIGHT EFFECT
1	White	White snowflakes
2	Blue	Blue snowflakes
3	White	White snowflakes fast fade
4	Blue	Blue snowflakes fast fade
5	Blue	Random blue/white fast fade
6	Blue	Random blue/white slow fade
7	All	Blue/white fade
8	Off	

The Snowball Light Projector will remember the mode last used.

## BATTERY SAFETY INFORMATION

- Only adults should install and replace batteries.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not dispose of batteries in fire. Battery may explode or leak.
- Batteries should be recycled or disposed of as per state and local guidelines.



This product and its batteries must be disposed of separately at your local waste recycling centre. Do not dispose them in your household waste bin.

©Disney  
[www.disney.com/frozen](http://www.disney.com/frozen)



MANUFACTURED BY UNCLE MILTON INDUSTRIES, INC.  
P.O. Box 6281, THOUSAND OAKS, CA 91359 USA  
©2015 UMI. All rights reserved. \* and TM designate trademarks of Uncle Milton Industries, Inc.  
MADE IN CHINA

2369-0250-0315-v01