

FIREFLIES IN MY ROOM™

Hanging Light-up Fireflies

AAA/LR03 x2 Batteries not included
Requires 2 x 1.5V AAA/LR03 batteries

AA/LR6 x3 Batteries not included
Requires 3 x 1.5V AA/LR6 batteries

- Includes:**
- 7 Fireflies
 - 1 Center leaf
 - 2 Side leaves
 - 5 Hanging leaves
 - 1 Mounting plate
 - 1 Mounting hardware set
 - 1 Remote Control
 - 1 Foam tape

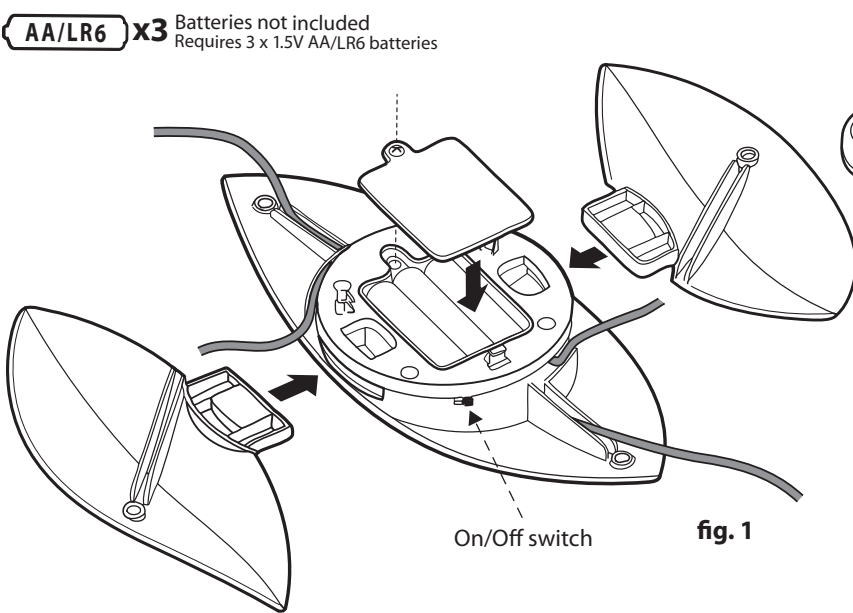


fig. 1

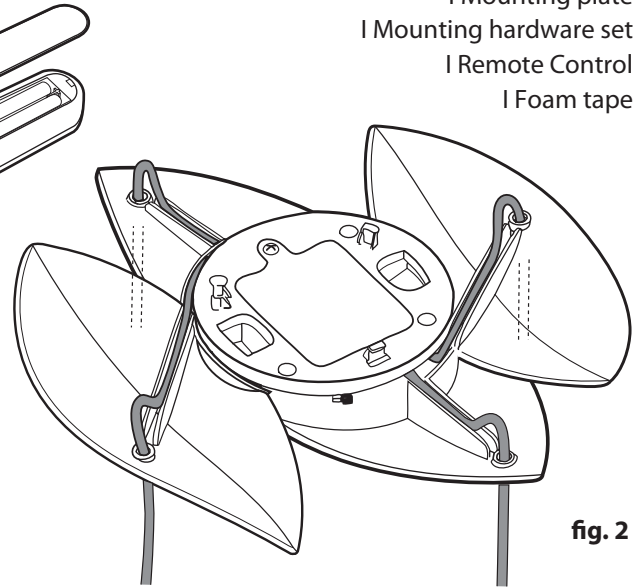


fig. 2

Battery Installation

Tool required - Small Phillips head screwdriver.

1. Using a Phillips head screwdriver, loosen the screw in the battery cover and remove the battery cover as shown.
2. Insert 3 "AA" batteries (not included) as indicated in the battery compartment into the Center Leaf and 2 "AAA" batteries as indicated in the battery compartment into the Remote.
3. Replace battery cover and tighten screw.
4. Switch the On/Off switch to the "ON" position.

Assembly

1. Connect side leaves as shown (fig. 1).
2. Run the 4 LED Cables through channels and holes in leaves as shown (fig. 2).

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

BATTERY SAFETY INFORMATION

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not dispose of batteries in fire. Battery may explode or leak.



WARNING:
CHOKING HAZARD - Small parts.
Not for children under 3 years.
Adult assembly required.

Mounting to ceiling

Tool required - Drill, 7/16" drill bit, small screwdriver

NOTE: THIS STEP SHOULD BE DONE BY AN ADULT.

NOTE: PRODUCT IS ONLY INTENDED TO BE INSTALLED ON A HORIZONTAL DRYWALL CEILING. BECAUSE OF VARIATIONS BETWEEN BUILDING MATERIALS AND CONSTRUCTION METHODS, THE INCLUDED MOUNTING HARDWARE MAY NOT BE SUITABLE FOR ALL INSTALLATIONS.

1. Determine the hanging location, being aware of ceiling stud locations. IMPORTANT! Make sure the mounting location is at least 20 inches from any walls or obstacles to ensure necessary clearance for hanging leaves (fig. 3).
2. Using the mounting plate as a template, place the mounting plate against the ceiling with the side marked "THIS SIDE DOWN" facing you. Using a pencil, mark the two outer holes.
3. With the markings you have made, drill two 7/16" holes all the way through the drywall.
4. Insert the hardware through the mounting plate as shown noting side labeled "THIS SIDE DOWN."
5. Insert hardware through ceiling as shown (fig. 5).
6. Gently maintain a downward pull on the mounting plate while screwing the hardware clockwise until the plate is snug against the ceiling. Do not over tighten (fig. 5).
7. Guide the three legs on the top of the Center Leaf into the corresponding holes on of the mounting plate (fig. 6).
8. Rotate the Center Leaf clockwise until you feel it click into place (fig. 6).

Final assembly







1. Connect the remaining 5 Hanging Leaves by plugging the LED Cables into the back of the leaves. Press firmly until you feel the Cable Connector snap into place (fig. 7).
2. Remove self adhesive backing and apply squares of foam tape to underside of fireflies (fig. 8).
3. Locate the fireflies as desired onto the smooth surface of the leaves as shown making sure the rear end of the firefly is fitting snugly against the LED. Press the each firmly into place (fig. 8).

Operation

IMPORTANT: The On/Off switch located on the Center Leaf, must be switched to the "ON" position.

1. Press the button on the Remote to turn on.
2. To turn off, press and hold the Remote button.

Note: To conserve battery life, the fireflies will turn off automatically after 30 minutes.

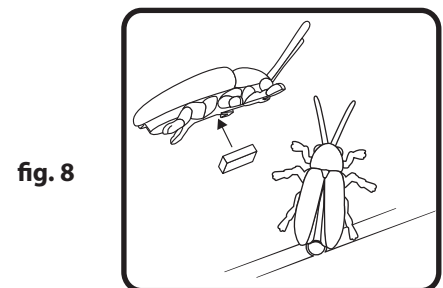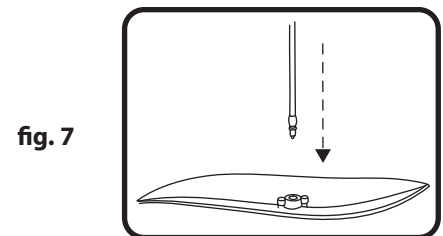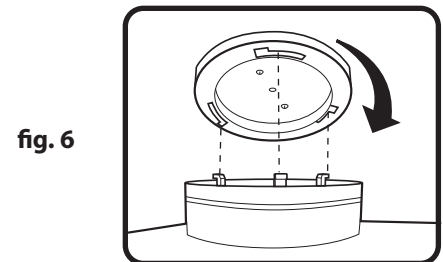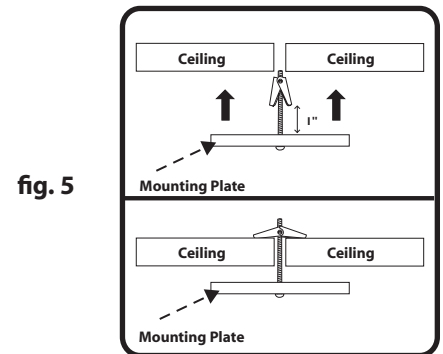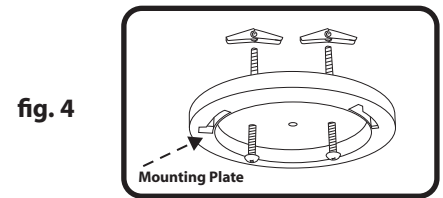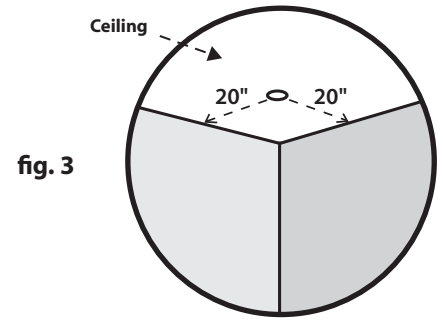

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE — DO NOT DISCARD

Questions? Visit unclemilton.com