



JOHN DEERE

Project farm images just about anywhere!

Turn out the lights and surprise your family and friends with images of farm animals or a John Deere tractor

EVERYTHING'S INCLUDED

- Farm projector
- 6 projector lenses
- Tractor wheel collar
- (3) 1.5V batteries



6 interchangeable farm images discs



x3

Batteries included

Requires 3 x 1.5V AG13 LR44 batteries

REPLACING BATTERIES

Tool required – small Phillips-head screw driver 

1. Using a Phillips-head screwdriver, remove the battery compartment cover.
2. Install 3 fresh LR44/AG13 button cell batteries only. Make sure the "+" and "-" ends are inserted correctly, as indicated in the battery compartment.
3. Replace the battery compartment cover. Do not over-tighten screw.



Remove battery tab before use.

More cool toys!
unclemilton.com

BATTERY SAFETY INFORMATION

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not dispose of batteries in fire. Battery may explode or leak.

Scan the code to check out more John Deere products at unclemilton.com



MANUFACTURED BY UNCLE MILTON INDUSTRIES, INC.
P.O. Box 6281
THOUSAND OAKS, CA 91359 USA

©2012 UMI. All rights reserved. ® and TM designate trademarks of Uncle Milton Industries, Inc.

MADE IN CHINA

Conforms to safety requirements of ASTM F963. Questions? Visit unclemilton.com. Product colors and styles may vary. Retain this package for future reference.

© 2012 Deere & Company and/or its suppliers. All Rights Reserved.



13260-0150-0512