

# Anteater Bug Vac™

## Battery Installation


Tool required - Small Phillips head screwdriver.

Using a Phillips head screwdriver, loosen the screw in the battery cover and remove the battery cover as shown.

Remove the battery module and insert 4 "AA/LR6" batteries (not included) as indicated on the battery module.

Replace battery module back into the product. NOTE: Do not force. The battery module is designed to only fit one way.

Replace battery cover and tighten screw.

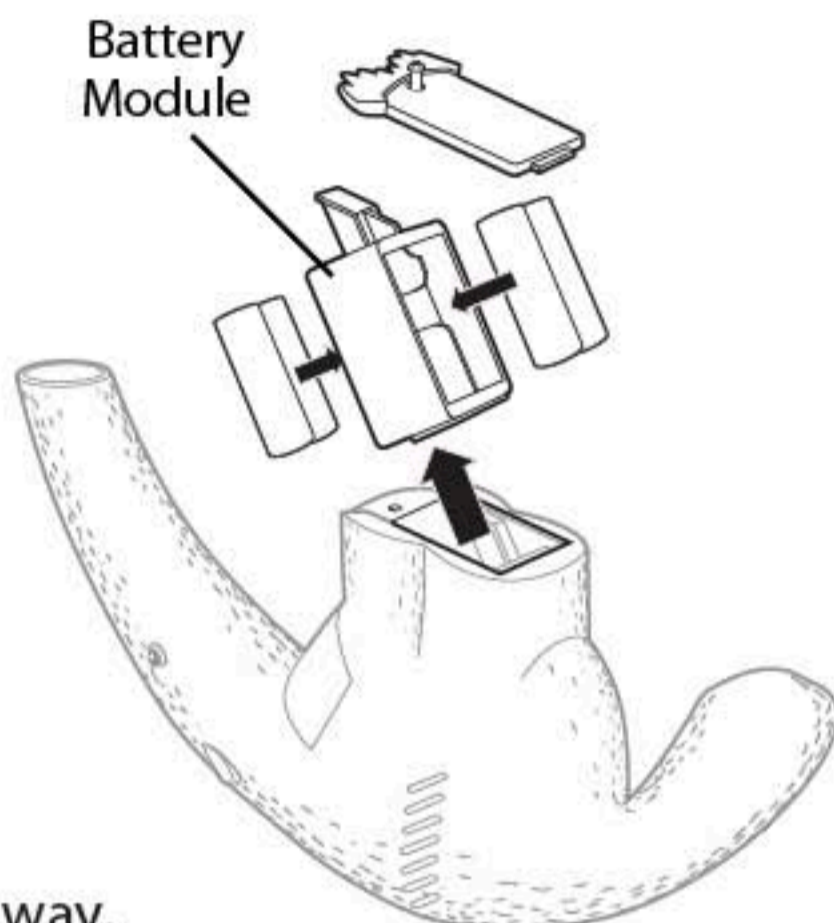


## Instructions

1. Insert the observation chamber into the Anteater Bug Vac and press firmly to secure in place - the door will open automatically when the observation chamber is fully inserted.

2. Make sure the observation chamber is securely connected to the body of the anteater and before you collect a bug.


3. Place the nose of the Anteater over a bug and squeeze the vacuum button.

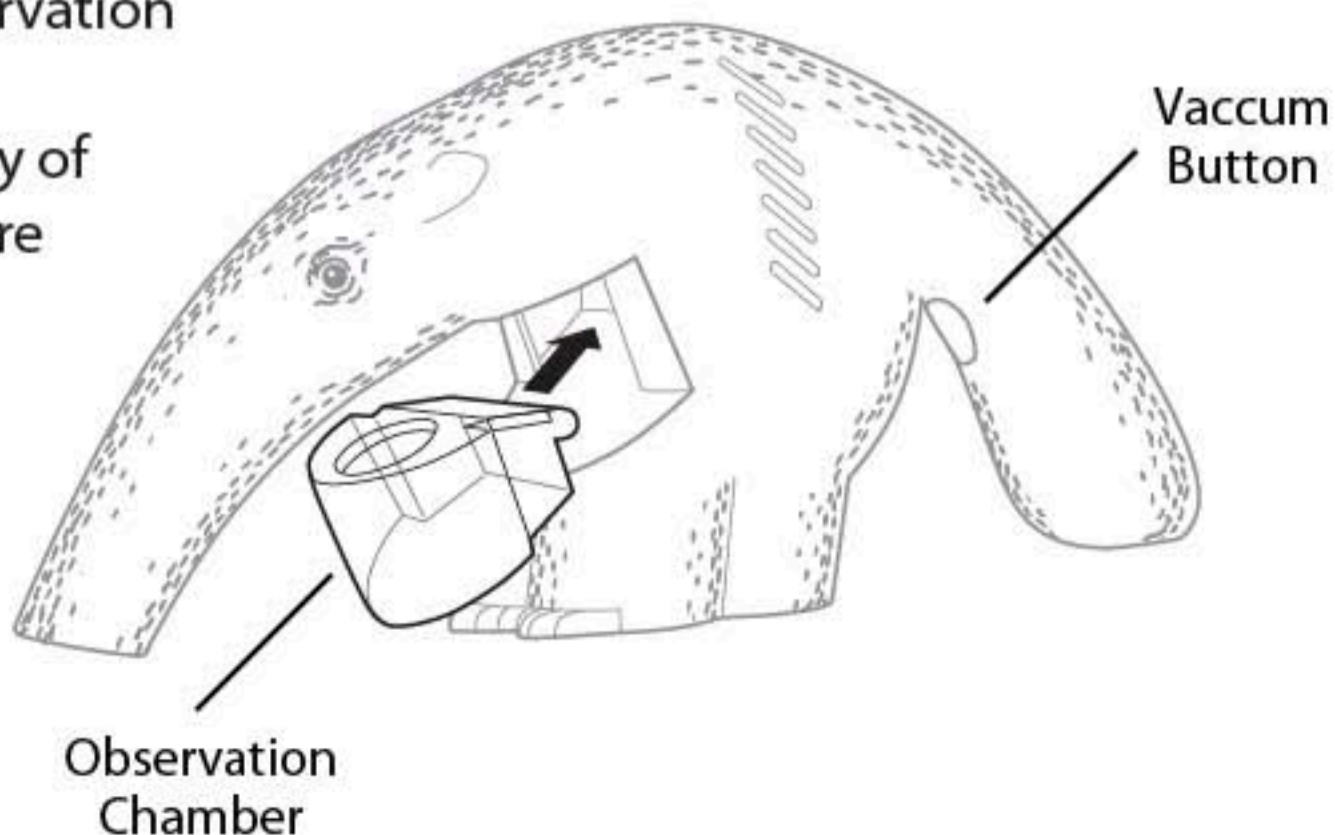



4. Once the bug is inside the observation chamber, remove the observation chamber from the anteater. The door on the observation chamber will automatically close when it is removed from the anteater.

5. Observe and then release the bug.

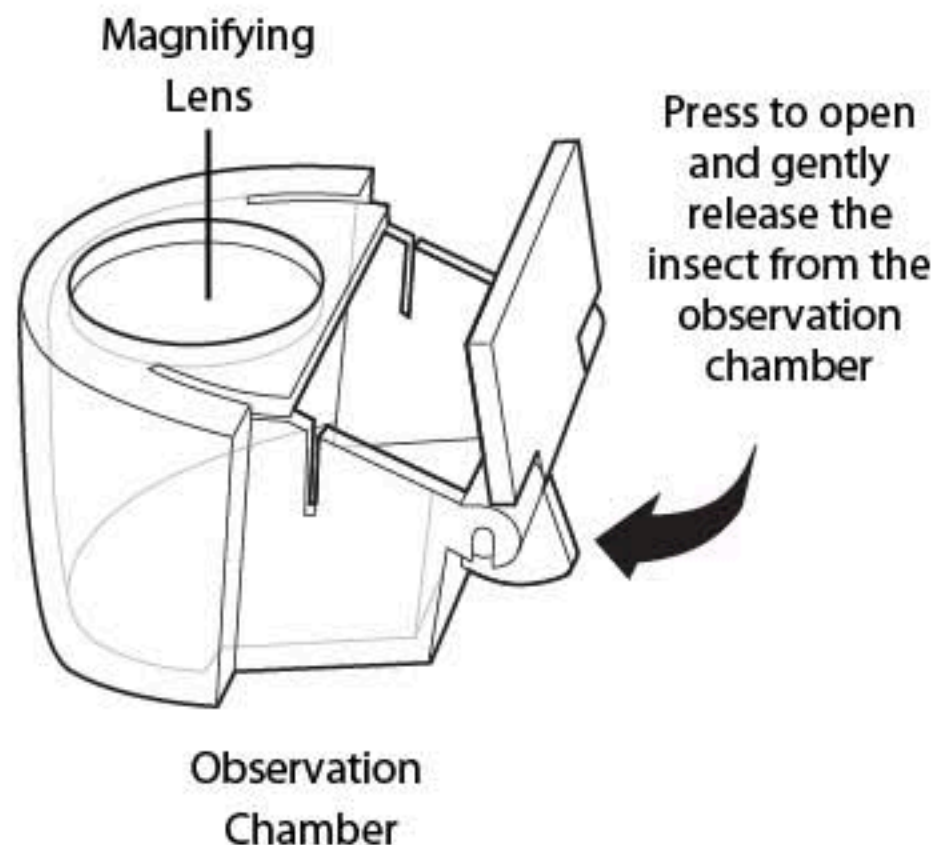

The observation chamber may be removed from the Anteater Bug Vac. The insect may be examined, released or transferred to the Bug Jug (sold separately).

Open the spring hinged cover by pressing on the release trigger on the observation chamber and gently shake the insect(s) out of the observation chamber.

Once the insect(s) is safely released, you may replace the observation chamber into the Anteater Bug Vac.

- DO NOT LEAVE IN DIRECT SUNLIGHT DUE TO THE RISK OF FIRE FROM THE MAGNIFYING GLASS.
- ALWAYS USE EXTREME CARE WHEN CATCHING AND OBSERVING INSECTS.

#### BATTERY SAFETY INFORMATION

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not dispose of batteries in fire. Battery may explode or leak.



National Geographic's net proceeds support vital exploration, conservation, research, and education programs.



Parents: Experience the National Geographic Channel. Call your cable or satellite provider for availability. Visit our website: [kids.nationalgeographic.com](http://kids.nationalgeographic.com)  
© 2012 National Geographic Society  
NATIONAL GEOGRAPHIC and Yellow Border Design are trademarks of the National Geographic Society. All rights reserved.

**KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE — DO NOT DISCARD**

**Questions? Visit [unclemilton.com](http://unclemilton.com)**

**Uncle Milton®**

MANUFACTURED BY UNCLE MILTON INDUSTRIES, INC.  
P.O. Box 6281  
THOUSAND OAKS, CA 91359 USA

©2012 UMI. All rights reserved.® and TM designate trademarks of Uncle Milton Industries, Inc.  
MADE IN CHINA

16407-0250-0612-V01