


Curl and Coil Snake Light™

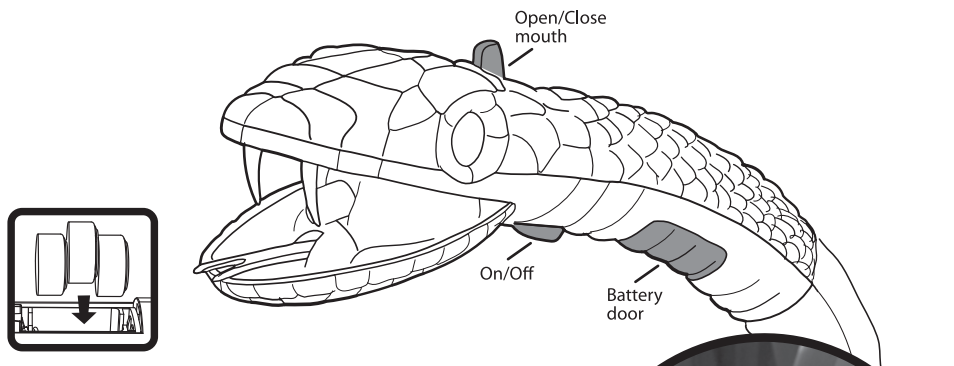

x3 Batteries included
Requires 3 x 1.5V AG13 / LR44 batteries

REPLACING BATTERIES

Tool required – small Phillips-head screwdriver

1. Using a Phillips-head screwdriver, remove the battery compartment cover.
2. Install fresh AG13/LR44 button cell batteries only. Make sure the “+” and “-” ends are inserted correctly, as indicated in the battery compartment.
3. Replace the battery compartment cover. Do not overtighten screw.



KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE — DO NOT DISCARD

Questions? Visit unclemilton.com

BATTERY SAFETY INFORMATION

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short circuited.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not dispose of batteries in fire. Batteries may explode or leak.



MANUFACTURED BY UNCLE MILTON INDUSTRIES, INC.
P.O. Box 6281
THOUSAND OAKS, CA 91359 USA
©2012 UMI. All rights reserved. ® and TM designate trademarks of Uncle Milton Industries, Inc.
MADE IN CHINA



Parents: Follow your instincts to the TV channel that's all about animals. Call your cable or satellite provider to get Nat Geo WILD.

Natgeowild.com



National Geographic's net proceeds support vital exploration, conservation, research, and education programs.

© 2012 National Geographic Society
NATIONAL GEOGRAPHIC and Yellow Border Design are trademarks of the National Geographic Society.
All rights reserved.