
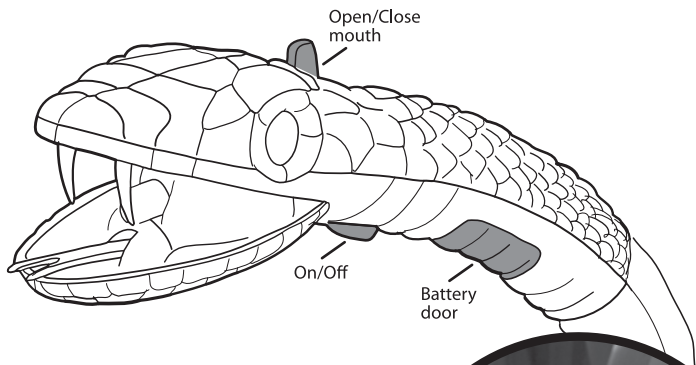


# Curl and Coil Snake Light™

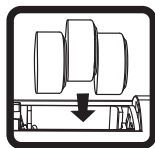

**x3 Batteries included**  
Requires 3 x 1.5V AG13 / LR44 batteries

## REPLACING BATTERIES

Tool required – small Phillips-head screwdriver

- Using a Phillips-head screwdriver, remove the battery compartment cover.
- Install fresh AG13/LR44 button cell batteries only. Make sure the “+” and “-” ends are inserted correctly, as indicated in the battery compartment.
- Replace the battery compartment cover. Do not overtighten screw.



**KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE — DO NOT DISCARD**

Questions? Visit [unclemilton.com](http://unclemilton.com)

### BATTERY SAFETY INFORMATION

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short circuited.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not dispose of batteries in fire. Batteries may explode or leak.



MANUFACTURED BY UNCLE MILTON INDUSTRIES, INC.  
P.O. Box 6281  
THOUSAND OAKS, CA 91359 USA  
©2012 UMI. All rights reserved. ® and TM designate trademarks of Uncle Milton Industries, Inc.  
MADE IN CHINA



Parents: Follow your instincts to the TV channel that's all about animals. Call your cable or satellite provider to get Nat Geo WILD.

[Natgeowild.com](http://Natgeowild.com)



National Geographic's net proceeds support vital exploration, conservation, research, and education programs.

© 2012 National Geographic Society  
NATIONAL GEOGRAPHIC and Yellow Border Design are trademarks of the National Geographic Society.  
All rights reserved.