


# Pet's Eye View Camera

**AAA/LR03 x2**

Batteries not included  
Requires 2x 1.5V AAA/LR03 batteries

## Digital Camera for Pets

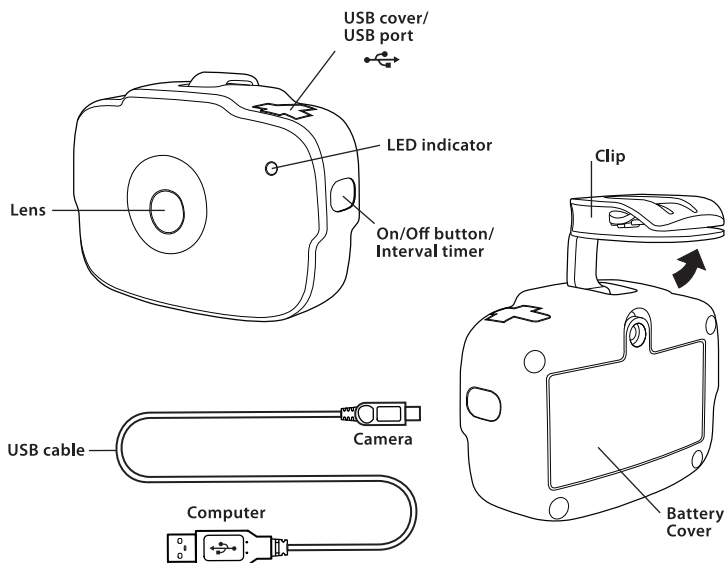

### Battery Installation

1. Using a small Phillips head screwdriver, remove the battery cover.
2. Insert 2 "AAA" / LR03 batteries as shown in the battery compartment and replace cover.

**Note:** Be sure to turn camera "OFF" before replacing batteries.

### FOR BEST RESULTS

- Download photos as soon as possible after every use
- Avoid water damage by securely replacing USB cover

### Camera Function

- To turn on, press the on/off button. The LED indicator will flash every two seconds while the camera is on and will take pictures every minute.
- The LED will stay on for about 2 seconds when it is about to take a picture.
- To turn off, press and hold the on/off button for 4 seconds. The LED indicator will go off.
- When the camera is turned on, it is automatically set to take a picture every minute. If desired, you can change the interval from 1 to 5 or 15 minutes.
- When the memory is full, the LED indicator will remain on. To conserve battery life, the camera will automatically shut off after 30 seconds.
- When the memory is full, photos must be downloaded before the camera can be used.

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

**Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.**

### BATTERY SAFETY INFORMATION

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not dispose of batteries in fire. Battery may explode or leak.

### Setting the Interval Timer

**NOTE:** When the camera is turned on, it is automatically set to take 1 photo every minute.

The interval timer button is used to set the period of time the camera waits between taking pictures. By pressing the Interval Timer button you can cycle through interval times of 1 minute, 5 minutes, or 15 minutes between pictures. The LED will flash indicating which interval mode is selected. See below:

Interval Setting	LED Indicator
1 minute	Flash 1 time
5 minutes	Flash 2 times
15 minutes	Flash 3 times

The timer will start once you have made a selection and will take photos at the time interval selected.