


AA/LR6

x2

Batteries are not included.
Requires 2 AA / LR6 batteries.

5+
16165

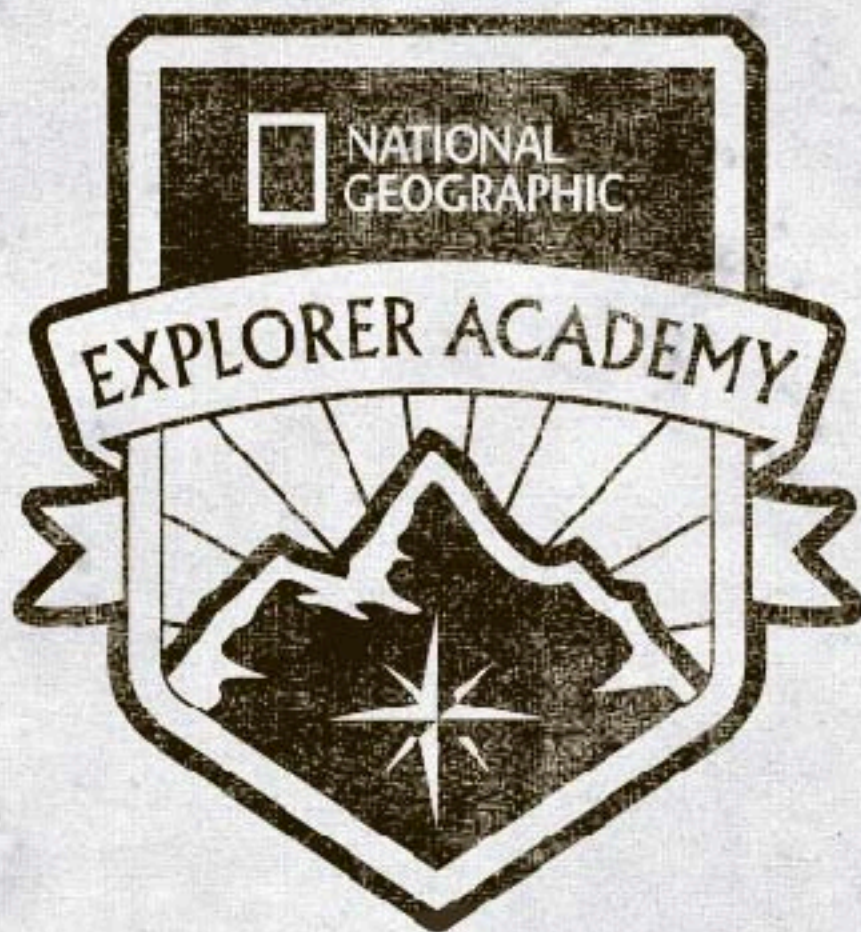

DINO XCAVATOR

INSTRUCTIONS



WARNING:
CHOKING HAZARD - Small parts.
Not for children under 3 years.

The skeleton of an extinct T. rex has been discovered! Now it's up to you to carefully remove each bone from the dig site. Draw a card, answer the question correctly and use the excavation tool...but be very careful! Don't touch the sides of the pit, or the T. rex will roar back to life. Collect the most bones and win!

Bone Placement: Place all bones and the egg in the appropriate pits.

Bone Xcavation cards: Shuffle and place the 12 Bone Xcavation cards facedown in a pile next to the Xcavation site.

How to Play (2-4 Players)

Begin by choosing a player to go first (player 1). Another player takes a Bone Xcavation card from the top of the deck and reads the question out loud to player 1.

If player 1 answers the Dino Trivia question incorrectly, the card goes to the bottom of the deck and it is now player 2's turn.

If player 1 answers the question correctly, he/she takes a Bone Xcavation Card from the top of the bone deck. He/she then grasps the Xcavation tool and attempts to remove that bone from the Xcavation

site without touching the sides of the bone pit. If successful, player 1 keeps the bone and places it in his/her bone pile. If he/she fails and the mighty T.rex roars, the bone goes back into the pit and it's player 2's turn.


Play continues until all of the T.rex bones and the egg have been successfully removed from the Xcavation site. The player who successfully removes the most from the Xcavation site is the winner!



JOIN THE ACADEMY
NatGeoAcademy.com



National Geographic's net proceeds support vital exploration, conservation, research, and education programs.

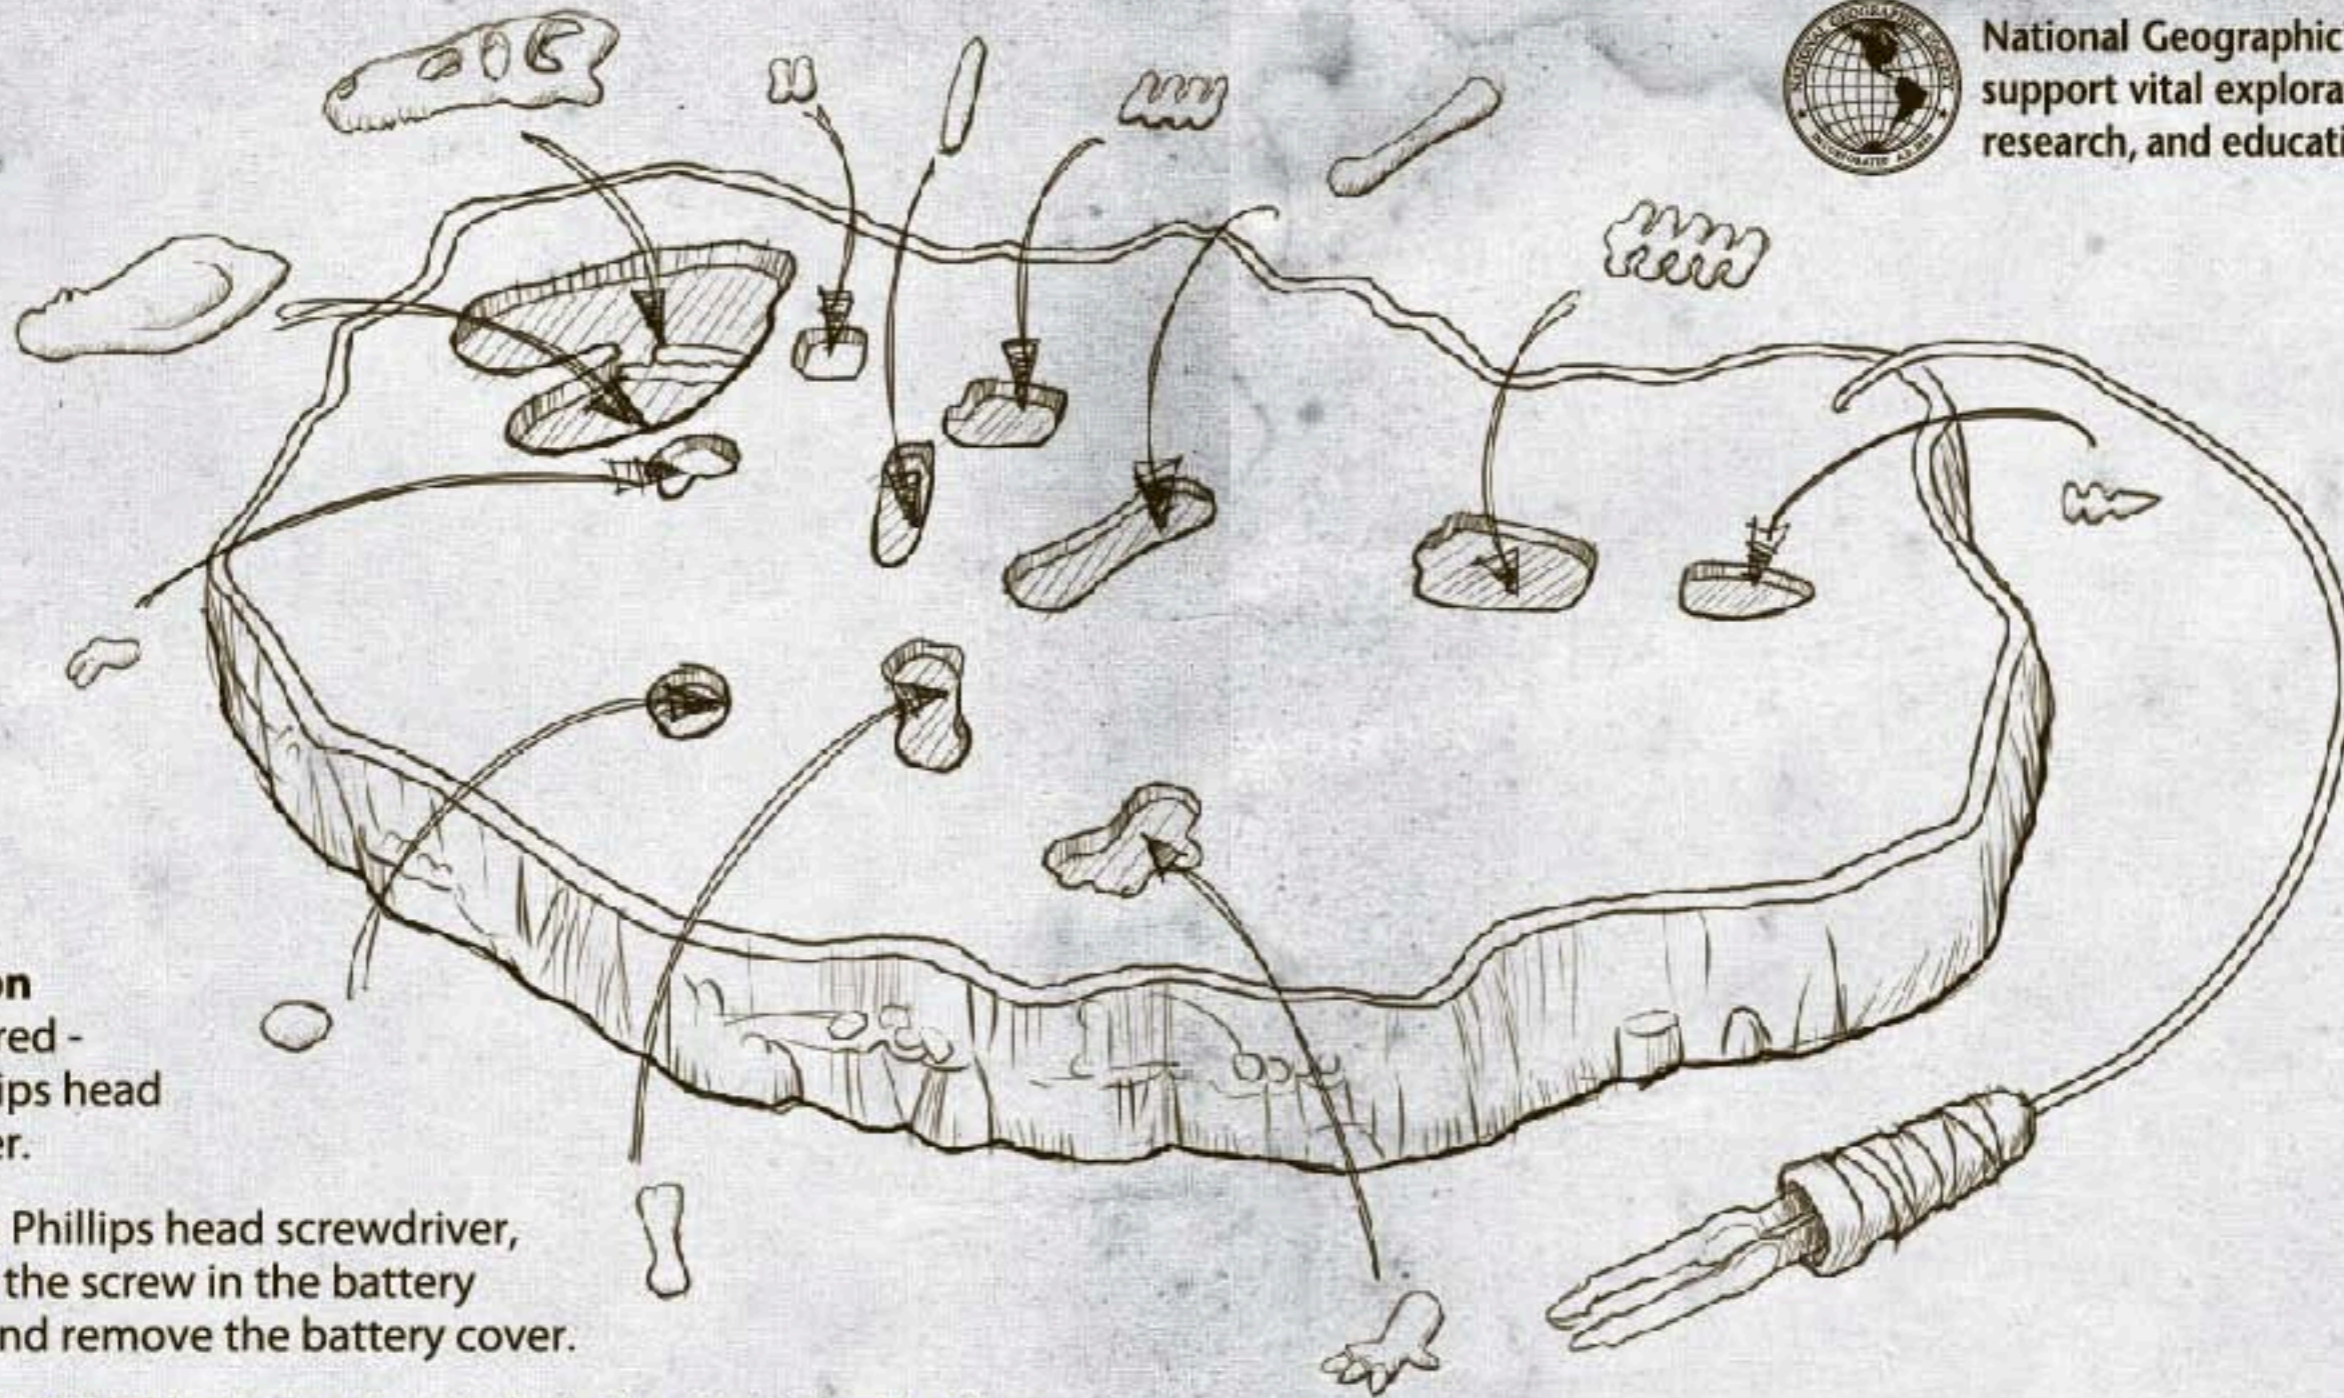

Battery Installation

Tool required - Small Phillips head screwdriver.

1. Using a Phillips head screwdriver, loosen the screw in the battery cover and remove the battery cover.
2. Insert 2 AA/LR6 batteries (not included) as indicated in the battery compartment.
3. Replace battery cover and tighten screw.

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE — DO NOT DISCARD

Questions? Visit unclemilton.com

BATTERY SAFETY INFORMATION

- Non-rechargeable batteries are not to be recharged
- Rechargeable batteries are to be removed from the toy before being charged
- Rechargeable batteries are only to be charged under adult supervision
- Different types of batteries or new and used batteries are not to be mixed
- Batteries are to be inserted with the correct polarity
- Exhausted batteries are to be removed from the toy
- The supply terminals are not to be short-circuited
- Do not mix old and new batteries
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries
- Do not dispose of batteries in fire. Battery may explode or leak.

Uncle Milton

MANUFACTURED BY
UNCLE MILTON INDUSTRIES, INC.
P.O. Box 6281
THOUSAND OAKS, CA 91359, U.S.A.
©2012 UMI. All rights reserved. ®
and TM designate trademarks of
Uncle Milton Industries, Inc.
PRINTED IN CHINA

NATIONAL GEOGRAPHIC

Parents: Experience the National Geographic Channel. Call your cable or satellite provider for availability.

Visit our website: kids.nationalgeographic.com
© 2012 National Geographic Society
NATIONAL GEOGRAPHIC and Yellow Border Design are trademarks of National Geographic Society. All rights reserved.