

Rainbow In My Room

Amazing Rainbow Projector

A rainbow is a unique and colorful natural phenomenon that occurs when sunlight shines through water vapor in the air. Tiny water droplets in the vapor act like millions of prisms, spreading light out into its visible spectrum of colors: red, orange, yellow, green, blue and violet. It appears across the sky as an arc because incoming rays of sunlight are virtually parallel and because the water droplet prisms are spherical. If the earth did not get in the way of your view, a rainbow would appear as a complete circle. A rainbow is really an optical illusion; it is not really out there in the sky. Its occurrence depends on the viewer's location, the position of the sun, and the presence of water vapor in the air. Now you can enjoy a brilliant rainbow anytime... in your room!

This package contains:

- Rainbow Projector
- Instructions

Installing batteries into the Rainbow Projector

Tool required - Small Phillips head screwdriver

Requires 4 "AAA" alkaline batteries (not included). Install batteries as follows:

1. Using a Phillips head screwdriver, remove the battery compartment cover (see Fig. 1).
2. Insert 4 "AAA" alkaline batteries. Make sure the "+" and "-" ends are inserted correctly, as indicated in the battery compartment.
3. Replace battery compartment cover. Do not over-tighten screws.

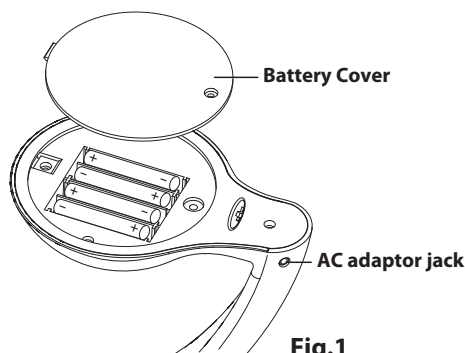 


Fig.1

Using an optional AC adapter

You can use an AC adapter (not included) instead of batteries.

For US and Canada use:

100 to 120 Volts AC, 60 Hz. Output 6 Volts DC, 450 mA

For Europe and Australia use:

220 to 240 Volts AC, 50 Hz. Output 6 Volts DC, 450 mA

This adaptor is available at many home electronics retail stores.

Please follow manufacturer's instructions for compatibility and use.

The AC adapter jack is located at the base of the Rainbow Projector.

BATTERY SAFETY INFORMATION

- Batteries are small objects. Batteries must be replaced by an adult.
- Follow the polarity (+/-) diagram in the battery compartment.
- Promptly remove dead batteries from the toy.
- Dispose of used batteries properly.
- Remove batteries for prolonged storage.
- Only batteries of same or equivalent type as recommended are to be used.
- DO NOT incinerate used batteries.
- DO NOT dispose of batteries in fire, as batteries may explode or leak.
- DO NOT mix old and new batteries or types of batteries (i.e. alkaline/standard).
- DO NOT use rechargeable batteries.
- DO NOT recharge non-rechargeable batteries.
- DO NOT short-circuit the supply terminals.

- The toy is not intended for children under 3 years old
- The toy must only be used with the recommended transformer
- The transformer is not a toy
- Toys liable to be cleaned with liquid are to be disconnected from the transformer before cleaning
- Toy is not to be connected more than recommended number of power supplied
- Transformers used with the toy are to be regularly examined for damage to the cord, plug, enclosure and other parts, and that, in the event of such damage, the toys must not be used with this transformer until the damage has been repaired.

The normal function of the product may be disturbed by Strong Electro Magnetic Interference. If so, simply reset the product to resume normal operation by following the instruction manual. In case the function could not resume, please use the product in other location.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, it can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

How to operate

1. On the bottom of the base, select your desired illumination mode — Mode 1 or Mode 2.
2. Press the button on top of the rainbow to turn it on/off (see Fig. 3).
3. If left on, the rainbow will turn off automatically after 10 minutes. If you are using an AC adapter, the unit will remain on until the on/off button is pressed.

Note: In modes 1 or 2, the sensor is always drawing a small amount of power. To prolong battery life switch to "OFF" during periods of non-use.

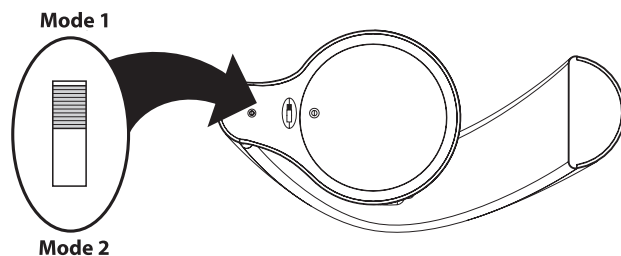 


Fig. 2

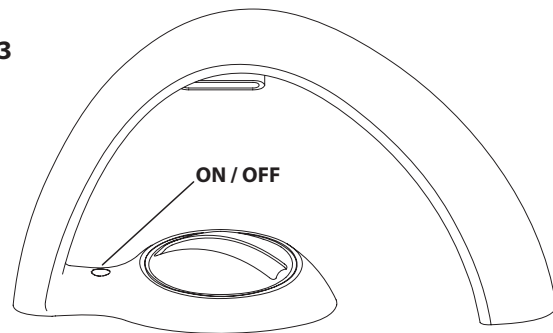 


Fig. 3

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE - DO NOT DISCARD

Problems? Before taking this product back to the store, contact us. Call 1-888-742-2484 or go to www.unclemilton.com



Uncle Milton Industries
Westlake Village, CA 91362
© 2008 UMI, Inc. All rights reserved.